



## Paint Filling Gun Starter Kit

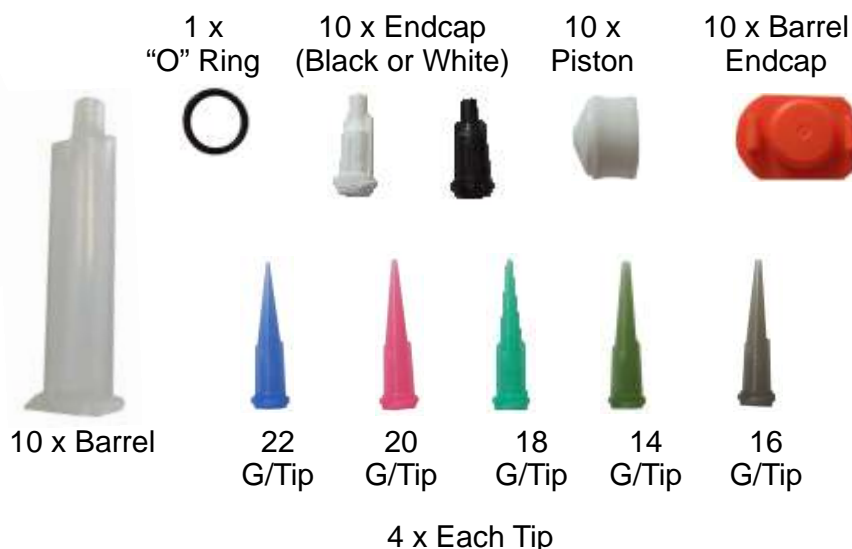

Ideal for colour filling of engraved large letters or logos

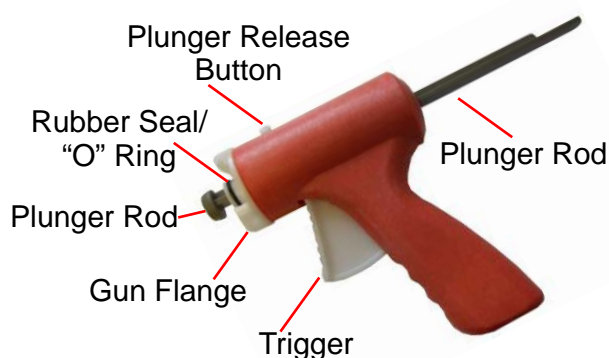

Take clear barrel and screw on endcap (black or white)



Fill barrel 3/4 full with colour filling paint and fit white piston domed end first into barrel .



Fit barrel to gun by pushing it hard over the rubber seal/'O' ring and twist anti clockwise to lock into place on the gun flange.



Remove endcap.



Fit tapered coloured nozzle to suit flow.



Put nozzle into 1st character to be filled and pull trigger slowly to allow paint to flow.



When character is filled, remove finger from trigger to stop flow.



Carry on filling remaining characters



When paint filling is finished hold up gun, remove coloured nozzle and refit endcap.



Barrel can be removed from gun by pushing down on Plunger Release Button whilst pulling plunger rod backwards. Remove barrel from gun and fit orange barrel endcap to save paint.



When paint is dry clean off excess. For brass and corian clean with brasso/duraglit.

For stone or slate use wet & dry abrasive paper to remove stubborn excess paint or scratches. For slate finish with a coat of linseed oil.

Keep O-ring and gun flange clean. Use light lubricant on O-ring and rod if required. Replace O-ring if damaged.

